 

 

 











 
 


 







 


 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Tv		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	FAV CH		Fav / Marker / PC
	0		0
	PRE CH		Back / Return
	Vol+		Vol+
	Mute		Mute / Dimmer
	PR+		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	Source		AV / Input / RDS
	PR-		CH- / Page-
	Info		Info / Angle
	Menu		Menu / Home
	Guide		Guide / EPG / -/-
	Tools		Setup / OPT /
	Up		Up
	Return		Shift + Back / Return
	Left		Left
	Enter		OK
	Right		Right
	CH LIST		Smart / List
	Down		Down
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat





Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	TTX/MIX		Text / Goto
	Media P		Display / Media
	P SIZE		Zoom / Size
	Dual		Audio / Lang I/II
	AD		Eject / Surround
	SUBT		Subtitle / EQ
	<<		<< / Tune-
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Stop		Stop / Hold

Originalfernbedienung Ersatzfernbedienung

