


**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PRE-CH		Fav / Marker / PC
	TTX/MIX		Text / Goto
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer

**Originalfernbedienung    Ersatzfernbedienung**

	PR+		CH+ / Page+
	PR-		CH- / Page-
	CH.List		Shift + Smart / List
	Menu		Menu / Home
	Smart Hub		Smart / List
	Guide		Guide / EPG / -/-
	Tools		Setup / OPT /
	Info		Info / Angle
	Up		Up
	Down		Down
	Right		Right
	Return		Back / Return
	Left		Left
	Enter		OK
	Exit		Exit / Cancel / Clear
	Red/A		Red / Netflix / Search
	Green/B		Green / APP / Repeat





Originalfernbedienung Ersatzfernbedienung

	Yellow/C		Yellow / YouTube / Repeat
	Blue/D		Blue / Prime Video / Random
	E-Manual		D.Menu / Top
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<</ <<		<< / Tune-
	AD/Subt.		Subtitle / EQ
	AD/Subt.		Audio / Lang I/II
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>/>>		>> / Tune+

Originalfernbedienung Ersatzfernbedienung


