 

 

 


 

 
 
 

 



 

 

 

 

 





 


 

 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	Subt.		Subt
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide
	PRE-CH		Pre Ch
	TTX/MIX		Text
	HDMI		Smart

Originalfernbedienung Ersatzfernbedienung

	DTV		TV/R
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	PR+		Ch +
	PR-		Ch -
	CH.List		List
	Menu		Menu
	Media.P		Media
	Guide		Guide
	Tools		Options
	Info		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok





Originalfernbedienung Ersatzfernbedienung

	Return		Back
	Exit		Exit
	Red/A		Red
	Green/B		Green
	Yellow/C		Yellow
	Blue/D		Blue
	PIP		3D
	PIP Down		I<<
	PIP Up		>>I
	P.Mode		Shift + Format
	SRS		Dual
	P.Size		Format
	Still		D. Menu
	Rec		Rec
	Stop		Stop
	<<		<<
	Play		Play

Originalfernbedienung Ersatzfernbedienung

	Pause		Pause
	>>		>>

