









 




 



 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	AD/Subt		Subtitle / EQ
	P.Size		Zoom / Size
	E-Manual		D.Menu / Top
	Tools		Setup / OPT /
	TTX/MIX		Text / Goto
	Source		AV / Input / RDS
	Menu		Menu / Home
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Info		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	PRE-CH		Back / Return
	Vol+		Vol+
	CH List		Smart / List
	PR+		CH+ / Page+
	Vol-		Vol-
	Media.P		Display / Media
	PR-		CH- / Page-
	1		1
	2		2
	3		3
	4		4





Originalfernbedienung Ersatzfernbedienung

5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
GUIDE	Guide	GUIDE EPG	Guide / EPG / -/--
0	0	HDMI - SAT 0	0
A	Red/A	NETFLIX SEARCH	Red / Netflix / Search
B	Green/B	APP REPEAT	Green / APP / Repeat
C	Yellow/C	YouTube REPEAT A-B	Yellow / YouTube / Repeat
D	Blue/D	Prime Video RANDOM	Blue / Prime Video / Random
RETURN	Return	SHIFT + RETURN BACK	Shift + Back / Return

Originalfernbedienung Ersatzfernbedienung

