






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV / Input / RDS
	HDMI		Shift + 0
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TTX/MIX		Text / Goto
	0		0
	PRE-CH		Fav / Marker / PC
	Vol+		Vol+
	Mute		Mute / Dimmer

Originalfernbedienung Ersatzfernbedienung

	PR+		CH+ / Page+
	Vol-		Vol-
	CH List		Display / Media
	PR-		CH- / Page-
	Menu		Menu / Home
	Smart Hub		Smart / List
	Guide		Guide / EPG / -/--
	Tools		Setup / OPT /
	Up		Up
	Info		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Return		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Red/A		Red / Netflix / Search





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
B	Green/B	APP REPEAT	Green / APP / Repeat				
C	Yellow/C	YouTube REPEAT A-B	Yellow / YouTube / Repeat				
D	Blue/D	Prime Video RANDOM	Blue / Prime Video / Random				
Family Story	Family Story	FORMAT PICTURE	Picture / Format				
SEARCH	Search	SHIFT + NETFLIX SEARCH	Shift + Red / Netflix / Netflix /				
3D	3D	SHIFT + CD- STB 3	Shift + 3				
SUPPORT	Support	TOP MENU D.MENU	D.Menu / Top				
P.SIZE	P.Size	SIZE ZOOM	Zoom / Size				
AD/SUBT.	AD/Subt	EQ SUBTITLE	Subtitle / EQ				
<</l<<	<</l<<	TUNE- <<	<< / Tune-				
<</l<<	<</l<<	PRESET- <<<	l<< / Preset-				
Pause	Pause	STEP - FREEZE 	Pause / Step / Freeze				
>>/>>l	>>/>>l	TUNE+ >>	>> / Tune+				
>>/>>l	>>/>>l	PRESET+ >>l	>>l / Preset+				
Rec	Rec	REC MODE	Rec / Rec Mode				
Play	Play	SLOW >	Play / Slow				
Stop	Stop	HOLD ■	Stop / Hold				

