






**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TTX/MIX		Text / Goto
	0		0
	PRE-CH		Back / Return
	VOL+		Vol+
	Mute		Mute / Dimmer
	PR+		CH+ / Page+

**Originalfernbedienung    Ersatzfernbedienung**

	VOL-		Vol-
	CH.LIST		Display / Media
	CH.LIST		Shift + Smart / List
	PR-		CH- / Page-
	Menu		Menu / Home
	Smart HUB		Smart / List
	Guide		Guide / EPG / -/--
	Tools		Setup / OPT /
	Up		Up
	Info		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Return		Shift + Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Red/A		Red / Netflix / Search





Originalfernbedienung    Ersatzfernbedienung

	Green/B		Green / APP / Repeat
	Yellow/C		Yellow / YouTube / Repeat
	Blue/D		Blue / Prime Video / Random
	E-Manual		D.Menu / Top
	3D		Picture / Format
	AD/Subt		Subtitle / EQ
	Stop		Stop / Hold
	I<<		I<< / Preset-
	<<		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	>>I		>>I / Preset+

Originalfernbedienung    Ersatzfernbedienung