







 




















 








 


 
 


 




 




 







 











Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Power	 Power	 Guide	 Guide
 Source	 AV	 Tools	 Options
 1	 1	 Smart Hub	 Smart
 2	 2	 Info	 Info
 3	 3	 Return	 Back
 4	 4	 Exit	 Exit
 5	 5	 Enter	 Ok
 6	 6	 Up	 Up
 7	 7	 Down	 Down
 8	 8	 Right	 Right
 9	 9	 Left	 Left
 0	 0	 Red	 Red
 TTX/MIX	 Text	 Green	 Green
 PRE-CH	 Pre Ch	 Yellow	 Yellow
 Mute	 Mute	 Blue	 Blue
 CH List	 List	 Social Tv	 Media
 Menu	 Menu	 3D	 3D

Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Power	 Power	 TV	 AUX
 Source	 AV	 DVD	 SAT
 1	 1	 Play Mode	 REC MODE
 2	 2	 Stop	 Stop
 3	 3	 Left Nav	 Right Nav
 4	 4	 Disc Nav List	 Sound Dual
 5	 5	 AD Subt	 Settings Opt
 6	 6	 Return	 ECHO
 7	 7	 Exit	 3D
 8	 8	 Clear Exit	 Timer
 9	 9	 OK	 AV
 0	 0	 Up	 Up
 TTX/MIX	 Text	 Down	 Down
 PRE-CH	 Pre Ch	 Right	 Right
 Mute	 Mute	 Left	 Left
 CH List	 List	 Home Smart	 CH
 Menu	 Menu	 App Media	 VOL
		 3D	 CH



