







 




















 








 


 
 


 




 




 







 








Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Power	 Power	 Guide	 Guide
 Source	 AV	 Tools	 Options
 1	 1	 Smart Hub	 Smart
 2	 2	 Info	 Info
 3	 3	 Return	 Back
 4	 4	 Exit	 Exit
 5	 5	 Enter	 Ok
 6	 6	 Up	 Up
 7	 7	 Down	 Down
 8	 8	 Right	 Right
 9	 9	 Left	 Left
 0	 0	 Red	 Red
 TTX/MIX	 Text	 Green	 Green
 PRE-CH	 Pre Ch	 Yellow	 Yellow
 Mute	 Mute	 Blue	 Blue
 CH List	 List	 Social Tv	 Media
 Menu	 Menu	 3D	 3D

Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Power	 Power	 Guide	 Guide
 Source	 AV	 Tools	 Options
 1	 1	 Smart Hub	 Smart
 2	 2	 Info	 Info
 3	 3	 Return	 Back
 4	 4	 Exit	 Exit
 5	 5	 Enter	 Ok
 6	 6	 Up	 Up
 7	 7	 Down	 Down
 8	 8	 Right	 Right
 9	 9	 Left	 Left
 0	 0	 Red	 Red
 TTX/MIX	 Text	 Green	 Green
 PRE-CH	 Pre Ch	 Yellow	 Yellow
 Mute	 Mute	 Blue	 Blue
 CH List	 List	 Social Tv	 Media
 Menu	 Menu	 3D	 3D





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	P.Size		Format				
	AD/Subt.		Subt				
	Search		TV/R				
	E-Manual		D. Menu				
	Play		Play				
	Rec		Rec				
	Stop		Stop				
	Pause		Pause				
	<</ <<		<<				
	>>/>>		>>				
	Vol+		Vol +				
	Vol-		Vol -				
	P+		Ch +				
	P-		Ch -				

