 

 

 

 
 
 
 
 
 
 
 
 

 
 
 
 
 
 

 

 












Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	Tv/DTV		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PRE-CH		Pre Ch
	-/--		Shift + Guide
	Mute		Mute
	Vol+		Vol +

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol -
	PR+		Ch +
	PR-		Ch -
	Menu		Menu
	Exit		Exit
	Return		Back
	Tools		Options
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	[≡]/Text		Text
	Ch.List		List
	Subt.		Subt
	P.Size		Format
	Guide		Guide
	Enter		Ok





Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Info		Info

Originalfernbedienung Ersatzfernbedienung