
 


 










 


 
 















Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|--------|
|  | Power |  | Power |
|  | Open/Close |  | Eject |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Prog |  | Sleep |
|  | Clear |  | Exit |
|  | Step |  | Guide |
|  | Instant Replay |  | Format |
|  | Instant Skip |  | 3D |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|---------|
|  | I<</<< |  | I<< |
|  | Stop |  | Stop |
|  | Play |  | Play |
|  | Pause |  | Pause |
|  | >>I/>> |  | >>I |
|  | Return |  | Back |
|  | [II]/Menu |  | Menu |
|  | Info |  | Info |
|  | Disc Menu |  | D. Menu |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | Enter |  | Ok |
|  | A-B/Repeat |  | AV |
|  | EZ View |  | Smart |
|  | Subtitle |  | Subt |



