

 

 

 

 

 



 

 





















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Tv System		D.Menu / Top
	Display		Display / Media
	Subtitle		Subtitle / EQ
	Audio		Audio / Lang I/II
	Zoom		Zoom / Size
	Setup		Setup / OPT /
	Goto		Text / Goto
	Option		Shift + Setup / OPT / Tools
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	Return		Back / Return
	0		0
	Home		Menu / Home
	>>		>> / Preset+
	Play		Play / Slow
	Vol+		Vol+
	<<		<< / Preset-
	Stop		Stop / Hold
	Vol-		Vol-
	Pause/Step		Pause / Step / Freeze
	Repeat		Shift + Green / APP /
	Up		Up
	Left		Left
	OK		OK
	Right		Right



