




 

 

 

 

 

 

 

 

 

 

 

 

 

 
 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	PowerTv	 + 	Shift + Power
	Eject		Eject / Surround
	TTX/MIX		Text / Goto
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	DiscMenu		D.Menu / Top
	0		0
	TitleMenu/POPUP		Sound / Title
	I<<		I<< / Preset-



 


 

 


 
 
 


Originalfernbedienung Ersatzfernbedienung

	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Tv Vol+		Vol+
	Tv Mute		Mute / Dimmer
	Prog+		CH+ / Page+
	Tv Vol-		Vol-
	Tv Source		AV / Input / RDS
	Prog-		CH- / Page-
	CH List	 + 	Shift + Smart / List
	Home		Menu / Home
	Guide		Guide / EPG / -/--
	Tools		Setup / OPT /
	Up		Up







 





 



 

 

 

 



 



 







Originalfernbedienung Ersatzfernbedienung

	Power Tv		Power
	TTX/MIX		Text / Goto
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Stop		Stop / Hold

Originalfernbedienung Ersatzfernbedienung

	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Vol+		Vol+
	Mute		Mute / Dimmer
	Prog+		CH+ / Page+
	Vol-		Vol-
	Source		AV / Input / RDS
	Prog-		CH- / Page-
	CH List		Shift + Smart / List
	Home		Menu / Home
	Guide		Guide / EPG / -/-
	Tools		Setup / OPT /
	Up		Up
	Info		Info / Angle
	Left		Left
	Enter		OK
	Right		Right



