


 

 


 

 





 












Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TTX/MIX		Text
	PRE-CH		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute

Originalfernbedienung Ersatzfernbedienung

	CH+		Ch +
	CH-		Ch -
	CH List		List
	Sports		Media
	Guide		Guide
	Home		Smart
	Extra		D. Menu
	Info		Info
	Return		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Red		Red
	Green		Green



