






 
 
 
 




 

 

 




 

 
 
 






 

 
 
 
 
 
 



 
 
 

 
 



 
 

 
 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TTX/MIX		Text
	Guide		Guide
	Mute		Mute
	CH.List		List
	Vol+		Vol +

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol -
	PR+		Ch +
	PR-		Ch -
	Menu		Menu
	Home		Smart
	Content		Media
	Tools		Options
	Info		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Return		Back
	Exit		Exit
	Red/A		Red
	Green/B		Green





Originalfernbedienung   Ersatzfernbedienung

	Yellow/C		Yellow
	Blue/D		Blue
	Alarm		Dual
	3D		3D
	Subt.		Subt
	Stop		Stop
	<</ <<		<<
	Play		Play
	Pause		Pause
	>>/>>		>>

Originalfernbedienung   Ersatzfernbedienung