

 

 

 
 

 








 














Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source Tv		TV/Radio /
	Power Tv		Shift + Power
	Open/Close		Eject / Surround
	Vol- Tv		Vol-
	Vol+ Tv		Vol+
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Disc Menu		D.Menu / Top
	0		0

Originalfernbedienung Ersatzfernbedienung

	Popup/Title Menu		Shift + D.Menu / Top Menu
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Audio		Audio / Lang I/II
	Home		Menu / Home
	Subtitle		Subtitle / EQ
	Tools		Setup / OPT /
	Up		Up
	Info		Info / Angle
	Left		Left
	Enter		OK
	Right		Right





Originalfernbedienung Ersatzfernbedienung

	Return		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Red/A		Red / Netflix / Search
	Green/B		Green / APP / Repeat
	Yellow/C		Yellow / YouTube / Repeat
	Blue/D		Blue / Prime Video / Random
	View/Bonus		Picture / Format
	A-B/Repeat		Shift + Yellow / YouTube /
	Repeat		Shift + Green / APP /
	Screen/Full		Zoom / Size

Originalfernbedienung Ersatzfernbedienung