 

 


 
 


 
 
 

 

 

 
 
 

 
 





 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TTX/MIX		Text
	PRE-CH		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute

Originalfernbedienung Ersatzfernbedienung

	P+		Ch +
	P-		Ch -
	CH.List		List
	Smart Hub		Smart
	Menu		Menu
	Guide		Guide
	Tools		Options
	Info		Info
	Return		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Red		Red
	Green		Green





Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow
	Blue		Blue
	Social Tv		Media
	Search		TV/R
	3D		3D
	E-Manual		D. Menu
	P.Size		Format
	AD/Subt.		Subt
	<</ <<		<<
	Pause		Pause
	>/>>		>>
	Rec		Rec
	Play		Play
	Stop		Stop

Originalfernbedienung Ersatzfernbedienung