










Originalfernbedienung Ersatzfernbedienung

	POWER		Power
	SOURCE		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TTX/MIX		Text / Goto
	PRE-CH		Fav / Marker / PC
	VOL+		Vol+
	VOL-		Vol-
	MUTE		Mute / Dimmer

Originalfernbedienung Ersatzfernbedienung

	CH+		CH+ / Page+
	CH-		CH- / Page-
	CH LIST		Smart / List
	MENU		Menu / Home
	MEDIA.P		Display / Media
	GUIDE		Guide / EPG / -/--
	TOOLS		Setup / OPT /
	INFO		Info / Angle
	RETURN		Back / Return
	EXIT		Exit / Cancel / Clear
	UP		Up
	DOWN		Down
	RIGHT		Right
	LEFT		Left
	OK		OK
	RED		Red / Netflix / Search
	GREEN		Green / APP / Repeat



