
























 








 


















 

 
 






Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------|---|------------------|
|  | Power |  | Power |
|  | Source |  | AV / Input / RDS |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | TTX/MIX |  | Text / Goto |
|  | 0 |  | 0 |
|  | PRE-CH |  | Back / Return |
|  | Vol+ |  | Vol+ |
|  | Mute |  | Mute / Dimmer |
|  | P+ |  | CH+ / Page+ |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|------------------------|
|  | Vol- |  | Vol- |
|  | CH.List |  | Smart / List |
|  | P- |  | CH- / Page- |
|  | Media P. |  | Display / Media |
|  | Menu |  | Menu / Home |
|  | Guide |  | Guide / EPG / -/- |
|  | Tools |  | Setup / OPT / |
|  | Up |  | Up |
|  | Info |  | Info / Angle |
|  | Left |  | Left |
|  | Enter |  | OK |
|  | Right |  | Right |
|  | Return |  | Shift + Back / Return |
|  | Down |  | Down |
|  | Exit |  | Exit / Cancel / Clear |
|  | Red |  | Red / Netflix / Search |
|  | Green |  | Green / APP / Repeat |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|-----------------------------|
|  | Yellow |  | Yellow / YouTube / Repeat |
|  | Blue |  | Blue / Prime Video / Random |
|  | E-Manual |  | D.Menu / Top |
|  | 3D |  | Shift + 3 |
|  | Sports |  | Sound / Title |
|  | Stop |  | Stop / Hold |
|  | << |  | << / Tune- |
|  | l<< |  | l<< / Preset- |
|  | Play |  | Play / Slow |
|  | Pause |  | Pause / Step / Freeze |
|  | >> |  | >> / Tune+ |
|  | >>l |  | >>l / Preset+ |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | |
|--|--|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

