



 

 

 

 

 

 

 

 

 
 
 
 








 


 
 
 
 



 





 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Tv		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Enter		Ok
	PRE-CH		Pre Ch
	CH LIST		List
	FAV CH		Shift + Pre Ch
	Tools		Options

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu
	Return		Back
	Info		Info
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Eject
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Source		AV





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	PR+		Ch +
	PR-		Ch -
	TTX/MIX		Text
	Media.P		Media
	P.Size		Format
	Dual		Dual
	Guide		Guide
	Subt		Subt
	<<		<<
	Pause		Pause
	>>		>>
	Rec		Rec
	Play		Play
	Stop		Stop

