



Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Off	+	Shift + Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	_/_/-/Del		Guide
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	Content (Home)		Smart

Originalfernbedienung Ersatzfernbedienung

	Source		AV
	CH+		Ch +
	CH-		Ch -
	MagicInfo/Lite /S		Media
	Menu		Menu
	Blank		Pre Ch
	Tools		Options
	Info		Info
	Return		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Red/PC		Red
	Green/DVI		Green



