



Originalfernbedienung Ersatzfernbedienung

|  |                |  |               |
|--|----------------|--|---------------|
|  | Standby        |  | Power         |
|  | Off            |  | Shift + Power |
|  | 1              |  | 1             |
|  | 2              |  | 2             |
|  | 3              |  | 3             |
|  | 4              |  | 4             |
|  | 5              |  | 5             |
|  | 6              |  | 6             |
|  | 7              |  | 7             |
|  | 8              |  | 8             |
|  | 9              |  | 9             |
|  | 0              |  | 0             |
|  | _/_-/-/Del     |  | Guide         |
|  | Mute           |  | Mute          |
|  | Vol+           |  | Vol +         |
|  | Vol-           |  | Vol -         |
|  | Content (Home) |  | Smart         |

Originalfernbedienung Ersatzfernbedienung

|  |                   |  |         |
|--|-------------------|--|---------|
|  | Source            |  | AV      |
|  | CH+               |  | Ch +    |
|  | CH-               |  | Ch -    |
|  | Magicinfo/Lite /S |  | Media   |
|  | Menu              |  | Menu    |
|  | Blank             |  | Pre Ch  |
|  | Tools             |  | Options |
|  | Info              |  | Info    |
|  | Return            |  | Back    |
|  | Exit              |  | Exit    |
|  | Up                |  | Up      |
|  | Down              |  | Down    |
|  | Right             |  | Right   |
|  | Left              |  | Left    |
|  | Enter             |  | Ok      |
|  | Red/PC            |  | Red     |
|  | Green/DVI         |  | Green   |





Originalfernbedienung Ersatzfernbedienung

|   |             |   |        |
|---|-------------|---|--------|
|  | Yellow/HDMI |  | Yellow |
|  | Blue/DP     |  | Blue   |
|  | Magicinfo   |  | TV/R   |
|  | 3D          |  | 3D     |
|  | Lock        |  | Eject  |
|  | Stop        |  | Stop   |
|  | <</ <<      |  | <<     |
|  | Play        |  | Play   |
|  | Pause       |  | Pause  |
|  | >>/>>       |  | >>     |
|   |             |   |        |
|   |             |   |        |
|   |             |   |        |
|   |             |   |        |
|   |             |   |        |
|   |             |   |        |
|   |             |   |        |
|   |             |   |        |
|   |             |   |        |
|   |             |   |        |
|   |             |   |        |
|   |             |   |        |
|   |             |   |        |

Originalfernbedienung Ersatzfernbedienung

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |

