



 


 
 
 
 

 

 
 
 
 

 











 



 


 

 

 
 

 
 
 
 
 
 
 
 
 

 
 

 

 

 
 








Originalfernbedienung Ersatzfernbedienung

|   |         |   |        |
|---|---------|---|--------|
|    | Power   |    | Power  |
|    | Source  |    | AV     |
|    | 1       |    | 1      |
|    | 2       |    | 2      |
|    | 3       |    | 3      |
|    | 4       |    | 4      |
|    | 5       |    | 5      |
|    | 6       |    | 6      |
|    | 7       |    | 7      |
|   | 8       |   | 8      |
|  | 9       |  | 9      |
|  | 0       |  | 0      |
|  | TTX/MIX |  | Text   |
|  | PRE-CH  |  | Pre Ch |
|  | Vol+    |  | Vol +  |
|  | Vol-    |  | Vol -  |
|  | Mute    |  | Mute   |

Originalfernbedienung Ersatzfernbedienung

|   |             |   |               |
|---|-------------|---|---------------|
|    | CH List     |    | List          |
|    | CH+         |    | Ch +          |
|    | CH-         |    | Ch -          |
|    | Netflix     |    | Shift + Media |
|    | Home        |    | Smart         |
|    | Rakuten Tv  |    | TV/R          |
|    | Prime Video |    | Media         |
|    | Guide       |    | Guide         |
|    | Return      |    | Back          |
|   | Exit        |   | Exit          |
|  | Up          |  | Up            |
|  | Down        |  | Down          |
|  | Right       |  | Right         |
|  | Left        |  | Left          |
|  | OK          |  | Ok            |
|  | Red         |  | Red           |
|  | Green       |  | Green         |



