

 
 
 
 
 

 






 

 

 


 









 





 
 


 





 





 






 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Tv		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV CH		Shift + Pre Ch
	PRE CH		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute

Originalfernbedienung Ersatzfernbedienung

	Source		AV
	P +		Ch +
	P -		Ch -
	Info		Info
	Menu		Menu
	Guide		Guide
	Tools		Options
	Return		Back
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	Enter		Ok
	CH LIST		List
	Exit		Exit
	Red		Red
	Green		Green





Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow
	Blue		Blue
	TTX/MIX		Text
	SRS		Media
	P SIZE		Format
	Dual I/II		Dual
	AD		Shift + Subt
	SUBT		Subt
	<<		<<
	<<		I<<
	Pause		Pause
	>>		>>
	>>		>>I
	Rec		Rec
	Play		Play
	Stop		Stop

Originalfernbedienung Ersatzfernbedienung

