






 

 

 

 

 

 

 

 

 







 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	Zoom		Shift + Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Video Sel		Smart
	Step		Guide
	I.Replay		Options
	I.Skip		TV/R

Originalfernbedienung Ersatzfernbedienung

	<<		<<
	>>		>>
	l<<		l<<
	Stop		Stop
	Play		Play
	Pause		Pause
	>>l		>>l
	Menu		Menu
	Return		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Disc Menu		D. Menu
	EZ View		3D
	Info		Info



