





 




 
















 








Originalfernbedienung Ersatzfernbedienung

	Standby / On		Power
	Open / Close		Eject / Surround
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TV / DVD		AV / Input / RDS
	0		0
	TV / Radio		TV/Radio /
	I<<<		I<<< / Preset-
	Copy		Setup / OPT /
	Timer		Sleep / Timer

Originalfernbedienung Ersatzfernbedienung

	>>I		>>I / Preset+
	<<		<< / Tune-
	Stop		Stop / Hold
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Repeat		Shift + Green / APP /
	Menu		Menu / Home
	Return		Back / Return
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Title List / Disc Menu		D.Menu / Top
	Info		Info / Angle
	Cancel		Exit / Cancel / Clear





**Originalfernbedienung Ersatzfernbedienung**

	Play List / Title Menu		Smart / List
	Rec		Rec / Rec Mode
	Rec Pause	 + 	Shift + Pause / Step /
	Rec Mode	 + 	Shift + Rec / Rec Mode
	Anykey		Picture / Format
	Red / i		Red / Netflix / Search
	Green / Subtitle / Text		Text / Goto
	Green / Subtitle / Text		Subtitle / EQ
	Green / Subtitle / Text		Green / APP / Repeat
	Yellow / ALT		Yellow / YouTube / Repeat
	Blue / Audio		Audio / Lang I/II
	Blue / Audio		Blue / Prime Video / Random
	EPG		Guide / EPG / -/--
	FAV		Fav / Marker / PC

**Originalfernbedienung Ersatzfernbedienung**