 

 


















 

 

 



 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject / Surround
	Function		AV / Input / RDS
	1/RDS Display		1
	2		2
	3/TA		3
	4/PTY-		4
	5/PTY Search		5
	6/PTY+		6
	7		7
	8		8
	9		9
	Disc Menu		D.Menu / Top
	0		0
	Title Menu PopUp		Shift + D.Menu / Top Menu
	I<<		I<< / Preset-
	>>I		>>I / Preset+

Originalfernbedienung Ersatzfernbedienung

	<<		<< / Tune-
	>>		>> / Tune+
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Vol+		Vol+
	Mute		Mute / Dimmer
	Tuning/CH-		CH- / Page-
	Tuning/CH+		CH+ / Page+
	Vol-		Vol-
	Tv Sound		Sound / Title
	S/W Level		Picture / Format
	Home		Menu / Home
	Sleep		Sleep / Timer
	Tools		Setup / OPT /
	Up		Up
	Info		Info / Angle









Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Left		Left				
	Enter		OK				
	Right		Right				
	Return		Back / Return				
	Down		Down				
	Exit		Exit / Cancel / Clear				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow/Tuner		Yellow / YouTube / Repeat				
	Blue/Mo/St		Blue / Prime Video / Random				
	Smart Hub		Smart / List				
	Search		Shift + Red / Netflix / Search				
	Sound Effect		Shift + Sound / Title				
	3D/Sound		Audio / Lang I/II				



 



 

 











 


 
 

 

 



 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Function		AV / Input / RDS
	1/RDS Display		1
	2		2
	3/TA		3
	4/PTY-		4
	5/PTY Search		5
	6/PTY+		6
	7		7
	8		8
	9		9
	0		0
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Stop		Stop / Hold

Originalfernbedienung Ersatzfernbedienung







 

 

 

 

 
 
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Vol+		Vol+
	Mute		Mute / Dimmer
	Tuning/CH-		CH- / Page-
	Tuning/CH+		CH+ / Page+
	Vol-		Vol-
	Tv Sound		Sound / Title
	Home		Menu / Home
	Sleep		Sleep / Timer
	Tools		Setup / OPT /
	Up		Up
	Info		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Return		Back / Return





Originalfernbedienung

Ersatzfernbedienung

	Down		Down
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow/Tuner		Yellow / YouTube / Repeat
	Blue/Mo/St		Blue / Prime Video / Random
	Smart Hub		Smart / List
	Search		Shift + Red / Netflix /

Originalfernbedienung

Ersatzfernbedienung

