



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open / Close		Eject / Surround
	Dimmer		Shift + Mute / Dimmer
	BD		Shift + 2
	Tuner		Shift + 6
	AUX		Shift + 7
	1 / RDS Display		1
	2		2
	3 / TA		3
	4 / PTY-		4
	5 / PTY Search		5
	6 / PTY+		6
	7		7
	8		8
	9		9
	Audio		Audio / Lang I/II
	0		0

Originalfernbedienung Ersatzfernbedienung

	Subtitle		Subtitle / EQ
	I<<		I<< / Preset-
	Mo/St / Slow		Display / Media
	Pause		Pause / Step / Freeze
	>>I		>>I / Preset+
	<<		<< / Tune-
	Stop		Stop / Hold
	Play		Play / Slow
	>>		>> / Tune+
	Vol+		Vol+
	Mute		Mute / Dimmer
	Tuning+ / CH+		CH+ / Page+
	Vol-		Vol-
	Step		Shift + Pause / Step /
	Tuning- / CH-		CH- / Page-
	Menu		Menu / Home
	Return		Back / Return





Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Info		Info / Angle
	Down		Down
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	PopUp Menu / Title Menu		Shift + D.Menu / Top Menu
	Disc Menu		D.Menu / Top
	Dolby PL. II Mode		Shift + Sound / Title
	Dolby PL. II Effect		Sound / Title
	Tuner Memory		Rec / Rec Mode
	PIP		Picture / Format

Originalfernbedienung Ersatzfernbedienung

	SFE Mode		Smart / List
	DSP		Setup / OPT /
	Repeat		Shift + Green / APP /
	Repeat A-B		Shift + Yellow / YouTube /
	Zoom		Zoom / Size
	Sleep		Sleep / Timer

