

 
 

 
































Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Tv		TV/R
	PRE CH		Pre Ch
	0		0
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Source		AV




 



 
 
 
Originalfernbedienung Ersatzfernbedienung

	P+		Ch +
	P-		Ch -
	Menu		Menu
	Exit		Exit
	Return		Back
	Tools		Options
	Guide		Guide
	Enter		Ok
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	CH LIST		List
	Info		Info
	TTX/MIX		Text
	SUBT		Subt
	SRS		Smart





Originalfernbedienung Ersatzfernbedienung

	P SIZE		Format
	Dual		Dual
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Play		Play
	Pause		Pause
	Stop		Stop
	<<		<<
	>>		>>
	Rec		Rec
	AD	 + 	Shift + Subt
	FAV CH	 + 	Shift + Pre Ch

Originalfernbedienung Ersatzfernbedienung