
 




Originalfernbedienung Ersatzfernbedienung

	DVD		Power
	Tv Standby/On		Shift + Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv/DVD		TV/R
	Audio		Dual
	DVD		Smart
	HDD		Media
	Input		AV

Originalfernbedienung Ersatzfernbedienung

	Tv Vol+		Vol +
	Tv Vol-		Vol -
	Prog Up		Ch +
	Prog Down		Ch -
	Open/Close		Eject
	CM Skip		Yellow
	I<<		I<<
	<		Shift + Left
	>		Shift + Right
	>>		>>
	<<		<<
	Stop		Stop
	Play/Pause		Play
	>>		>>
	Title List/Disc Menu		D. Menu
	Menu		Menu
	Anykey		Red





Originalfernbedienung Ersatzfernbedienung

	Play List/Title Menu		List
	Return		Back
	Cancel		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Info		Info
	Repeat		Text
	Repeat A-B		Green
	Subtitle		Subt
	Rec		Rec
	Rec Pause		Pause
	Rec Mode		Shift + Rec
	Timer		Shift + AV
	Copy		Blue

Originalfernbedienung Ersatzfernbedienung

	Marker		3D







Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
 Tv Standby/On	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Tv Mute	 Mute
 Tv/DVD	 TV/R
 Input	 AV
 Prog Up	 Ch +
 Prog Down	 Ch -
 Tv Vol+	 Vol +

Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
 Tv Vol-	 Vol -

