

 

 
 
 
 
 

 
 
 



 

 

 

 
 
 
 
 
 
 

 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	HDMI		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	--		Guide
	PRE-CH		Pre Ch
	Vol+		Vol +
	Vol-		Vol -

Originalfernbedienung Ersatzfernbedienung

	Mute		Mute
	CH+		Ch +
	CH-		Ch -
	CH List		List
	Media.P		Media
	Menu		Menu
	FAV.CH		Shift + Pre Ch
	Tools		Options
	Info		Info
	Exit		Exit
	Return		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Red		Red





**Originalfernbedienung    Ersatzfernbedienung**

	Green		Green
	Yellow		Yellow
	Blue		Blue
	S.Mode		Dual
	Sleep		Sleep
	MTS		TV/R
	P.Mode		Format
	P.Size		3D
	CC		Subt
	<<<		<<<
	Pause		Pause
	>>>		>>>
	Rec		Rec
	Play		Play
	Stop		Stop

**Originalfernbedienung    Ersatzfernbedienung**