








 
















 

 


 
 
 

















Originalfernbedienung Ersatzfernbedienung

	POWER		Power
	OPEN/CLOSE		Eject
	DIMMER		Shift + Mute
	DVD		Blue
	TUNER/BAND		Green
	AUX		Red
	ASC		Shift + Ok
	SLOW/MO/ST		List
	SUBTITLE		Subt
	SUPER 5.1		Options
	MUSIC/ V-H/P		Dual
	MOVIE		D. Menu
	I<<		I<<
	STOP		Stop
	PAUSE		Pause
	PLAY		Play
	>>I		>>I

Originalfernbedienung Ersatzfernbedienung

	PL II MODE		Smart
	TUNING+ / CH+		Ch +
	TUNING- / CH-		Ch -
	VOLUME+		Vol +
	VOLUME -		Vol -
	PL II EFFECT		Media
	RETURN		Back
	MENU		Menu
	INFO		Info
	MUTE		Mute
	UP		Up
	LEFT		Left
	ENTER		Ok
	RIGHT		Right
	DOWN		Down
	1/RDS DISPLAY		1
	2		2



