

 

 

 
 

 
 


 

 

 




 
 
 
 




 

 
 




Originalfernbedienung Ersatzfernbedienung

	On/Standby		Power
	Timer On/Off		AV
	Timer Clock		Shift + AV
	Timer Clock		3D
	EQ Preset		Media
	Power Sound		Smart
	Program / Set		Shift + Sleep
	Program / Set		List
	AUX		1
	Sleep		Sleep
	CD Repeat		Text
	Mono / ST		Dual
	Tuner / Band		2
	<< Tape		Shift + <<
	>> Tape		Shift + >>
	Stop Tape		Shift + Stop
	Play Tape		Shift + Play

Originalfernbedienung Ersatzfernbedienung

	Stop CD		Stop
	Play CD		Play
	Pause CD		Pause
	Vol +		Vol +
	Vol +		Up
	Vol -		Vol -
	Vol -		Down
	>>I CD / Λ		>>I
	>>I CD / Λ		Right
	I<< CD / V		I<<
	I<< CD / V		Left
	Tuning Mode		Ok

