



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV/VCR - DVD		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Mute		Mute
	I-II Audio		Dual
	TV/Text		Text
	Input		AV

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol +
	Vol-		Vol -
	P/TRK+		Ch +
	P/TRK-		Ch -
	Slow+		Shift + Ch +
	Slow-		Shift + Ch -
	<< / Index		<<
	S.Mode		Shift + Dual
	P.Mode		Format
	>> / Mix		>>
	I<<		I<<
	>>I		>>I
	Stop		Stop
	Play / Pause		Play
	Play / Pause		Pause
	Red / Menu		Red
	Red / Menu		Menu





Originalfernbedienung Ersatzfernbedienung

	Green / DVD		Green
	Green / DVD		D. Menu
	Yellow / P.Size		Yellow
	Blue / Info		Blue
	Blue / Info		Info
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Open / Close		Eject
	Rec / Return		Rec
	Rec / Return		Back
	Pre-CH		Pre Ch
	Step	+	Shift + Pause
	Sleep		Sleep
	Show View		Media

Originalfernbedienung Ersatzfernbedienung

	Clear		Exit
	Angle		3D
	Repeat	+	Shift + Text
	SP/LP		TV/R
	Crystal PB		Options
	Zoom	+	Shift + Eject
	Subtitle		Subt

