





















 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Tv		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Enter		OK
	PRE-CH		Back / Return
	CH LIST		Shift + Smart / List
	FAV CH		Fav / Marker / PC
	Tools		Setup / OPT /

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu / Home
	Return		Shift + Back / Return
	Info		Info / Angle
	Internet		Smart / List
	Exit		Exit / Cancel / Clear
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Red		Red / Netflix / Search
	Enter		Shift + OK
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer



