



 

 



 

 




 


 



 

 

 

 















 



 





 





 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Input		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/-		Guide
	Pre CH		Pre Ch
	<<		<<
	Stop		Stop
	Play		Play

Originalfernbedienung Ersatzfernbedienung

	>>		>>
	V.Menu		D. Menu
	Mute		Mute
	P+		Ch +
	P+		Up
	P-		Ch -
	P-		Down
	Vol+		Right
	Vol+		Vol +
	Vol-		Left
	Vol-		Vol -
	Menu		Menu
	Display		Info
	P.STD		3D
	Rec		Rec
	Eject		Eject
	Pause / P/S		Pause





Originalfernbedienung Ersatzfernbedienung

	Crystal PB		TV/R
	TRK up		>>I
	TRK Down		I<<
	Index		List
	Memory		Ok
	Sleep		Sleep
	Lang.Sel		Dual
	Clear		Exit
	ShowView		Smart
	Mix		Shift + Text
	Text Size		Format
	Subpage		Subt
	TV/Text		Text

Originalfernbedienung Ersatzfernbedienung

