



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TTX/MIX		Text / Goto
	PRE-CH		Back / Return
	Mute		Mute / Dimmer
	CH List		Smart / List
	Vol+		Vol+

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	PR+		CH+ / Page+
	PR-		CH- / Page-
	Media.P		Display / Media
	Menu		Menu / Home
	HDMI		Shift + 0
	Tools		Setup / OPT /
	Info		Info / Angle
	Return		Shift + Back / Return
	Exit		Exit / Cancel / Clear
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	Enter		OK
	Red/A		Red / Netflix / Search
	Green/B		Green / APP / Repeat





Originalfernbedienung Ersatzfernbedienung

	Yellow/C		Yellow / YouTube / Repeat
	Blue/D		Blue / Prime Video / Random
	P.Mode		Picture / Format
	P.Size		Zoom / Size
	SRS		Sound / Title
	Stop		Stop / Hold
	<<		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+

Originalfernbedienung Ersatzfernbedienung

