









 



 





 

















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TTX/MIX		Text / Goto
	PRE-CH		Fav / Marker / PC
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer

Originalfernbedienung Ersatzfernbedienung

	CH List		Smart / List
	P+		CH+ / Page+
	P-		CH- / Page-
	Netflix		Shift + Red / Netflix /
	Home		Shift + Menu /
	Guide		Guide / EPG / -/-
	Menu		Menu / Home
	Info		Info / Angle
	Return		Back / Return
	Exit		Exit / Cancel / Clear
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	Enter		OK
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat





Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Sleep		Sleep / Timer
	Alarm		Setup / OPT /
	AD/Subt		Subtitle / EQ
	Stop		Stop / Hold
	<</ <<		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>/>>		>> / Tune+

Originalfernbedienung Ersatzfernbedienung

