 



 

 

 

 

 

 

 

 

 

 

 

 
 
 

 

 

 

 

 



 



 

 

 

 

 







 

 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Alarm		Smart / List
	Pre-CH		Back / Return
	Mute		Mute / Dimmer
	Source		AV / Input / RDS
	Vol+		Vol+

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	PR+		CH+ / Page+
	PR-		CH- / Page-
	CH-List		Display / Media
	Menu		Menu / Home
	FAV-CH		Fav / Marker / PC
	Tools		Setup / OPT /
	Info		Info / Angle
	Return		Shift + Back / Return
	Exit		Exit / Cancel / Clear
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	Enter		OK
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat



