 

















 







 











Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV / Input / RDS
	Caption		Subtitle / EQ
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		Eject / Surround
	PRE-CH		0
	Auto Prog.		Fav / Marker / PC
	Auto Prog.		TV/Radio /
	FAV.CH		Shift + Fav / Marker / PC

Originalfernbedienung Ersatzfernbedienung

	ADD/Del		D.Menu / Top
	Vol+		Vol+
	Mute		Mute / Dimmer
	CH+		CH+ / Page+
	Vol-		Vol-
	CH List		Smart / List
	CH-		CH- / Page-
	Menu		Menu / Home
	MTS		Display / Media
	Guide		Guide / EPG / -/--
	Tools		Setup / OPT /
	Up		Up
	Info		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Return		Back / Return



