







































Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	--		Zoom / Size
	PRE-CH		Back / Return
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer

Originalfernbedienung Ersatzfernbedienung

	CH List		Shift + Smart / List
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Menu		Menu / Home
	Smart Hub		Smart / List
	Guide		Guide / EPG / -/-
	Extra		TV/Radio /
	Info		Info / Angle
	Return		Shift + Back / Return
	Exit		Exit / Cancel / Clear
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	Enter		OK
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat



