 



 































Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV/Video		AV / Input / RDS
	PC		Fav / Marker / PC
	Display		Display / Media
	Still		Pause / Step / Freeze
	P.STD		Picture / Format
	S.STD		Sound / Title
	Left / Vol-		Left
	Left / Vol-		Vol-
	Up / P+		CH+ / Page+
	Up / P+		Up
	Right / Vol+		Right
	Right / Vol+		Vol+
	Menu / Index		OK
	Menu / Index		Menu / Home
	Down / P-		Down
	Down / P-		CH- / Page-

Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	exit		Exit / Cancel / Clear
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		Guide / EPG / -/--
	0		0
	Pre-CH		Back / Return
	TTX/Mix		Text / Goto
	Auto		Setup / OPT /
	Sleep / Hold		Sleep / Timer



