

 













Originalfernbedienung Ersatzfernbedienung

	Power		Power
	[≡?]/Info		Info / Angle
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PRE-CH		Back / Return
	Vol+		Vol+
	P+		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Vol-		Vol-
	P-		CH- / Page-
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Red/[ ]/P.Mode		Red / Netflix / Search
	Red/[ ]/P.Mode		Picture / Format
	Green/[ ]/S.Mod e		Green / APP / Repeat
	Green/[ ]/S.Mod e		Sound / Title
	Yellow/[ ]/Still		Yellow / YouTube / Repeat
	Yellow/[ ]/Still		Pause / Step / Freeze
	Blue/[ <> ]/Size		Shift + Zoom / Size





Originalfernbedienung Ersatzfernbedienung

	Blue/[<>]/Size		Blue / Prime Video / Random
	PIP Source		Display / Media
	[≡]/Text		Text / Goto
	[≡o]/Dual I-II		Audio / Lang I/II
	[≡◇]/Sleep		Sleep / Timer
	PIP		Smart / List
	Auto		D.Menu / Top

Originalfernbedienung Ersatzfernbedienung