

 

 















 

 








 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<</ <<		<< / Tune-
	>>/>>		>> / Tune+
	CC		Subtitle / EQ
	3D		Zoom / Size
	Sleep		Sleep / Timer
	Content		TV/Radio /
	Tools		Setup / OPT /
	Source		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	Info		Info / Angle
	Left		Left

Originalfernbedienung Ersatzfernbedienung

	Enter		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	PRE-CH		Fav / Marker / PC
	Vol+		Vol+
	CH List		Smart / List
	CH+		CH+ / Page+
	Vol-		Vol-
	CH-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7





Originalfernbedienung    Ersatzfernbedienung

	8		8
	9		9
	--		Guide / EPG / -/--
	0		0
	Red		Red / Netflix / Search
	Green/Alarm		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Home		Shift + Menu /
	Return		Back / Return

Originalfernbedienung    Ersatzfernbedienung