 

 


 
 



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|--------------|
|  | Power |  | Power |
|  | Eco |  +  | Shift + 3D |
|  | Audio |  | Dual |
|  | On Timer |  | Text |
|  | Caption |  | Subt |
|  | Reset |  | 3D |
|  | Sleep |  | Sleep |
|  | Picture |  | Format |
|  | Sound |  +  | Shift + Dual |
|  | Play |  | Play |
|  | Pause |  | Pause |
|  | Stop |  | Stop |
|  | << |  | << |
|  | >> |  | >> |
|  | W |  | Red |
|  | T |  | Green |
|  | Camera |  | Yellow |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|-------|
|  | Xacti Menu |  | Blue |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | --/Sub CH |  | Guide |
|  | Input |  | AV |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Mute |  | Mute |
|  | CH+ |  | Ch + |



