



Originalfernbedienung	Ersatzfernbedienung
Standby	Power
Computer	Comp / Video
Video	Shift + Comp / Video
Menu	Menu
Keystone	Shift + Up
Up	Up
Down	Down
Vol-	Vol - / Page -
Left	Left
Vol+	Vol + / Page +
Right	Right
Select	Enter
Lampcontrol	Shift + Power
C.Zoom Up	+ / Play
C.Zoom Down	- / Stop
Auto PC	Auto
Image	Eco / Aspect

Originalfernbedienung	Ersatzfernbedienung
Freeze	Freeze / Timer
P-Timer	Shift + Freeze / Timer
No Show	Mode
Mute	Blank / Mute

