 







 





























Originalfernbedienung Ersatzfernbedienung

	Open/Close		Eject / Surround
	Power		Power
	VCR		Shift + 4
	DVD		Shift + 2
	Input		AV / Input / RDS
	1/Tracking-		1
	2		2
	3/Tracking+		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	System		Smart / List
	Clear		Exit / Cancel / Clear

Originalfernbedienung Ersatzfernbedienung

	Setup		Setup / OPT /
	Display		Display / Media
	Title/PBC		Sound / Title
	Menu		Menu / Home
	Up		Up
	PR+ / CH PAGE		CH+ / Page+
	PR- / CH PAGE		CH- / Page-
	Down		Down
	Left		Left
	Right		Right
	OK/Enter		OK
	Subtitle		Subtitle / EQ
	Audio		Audio / Lang I/II
	Search		Red / Netflix / Search
	Zoom		Zoom / Size
	<<		<< / Tune-
	Pause		Pause / Step / Freeze



