
 
 
 

 




 




 
 
 
 


 




Originalfernbedienung Ersatzfernbedienung

On/Off		Power
Next		>>I
Audio Out		Mute
Slow Down	 + 	Shift + <<
F.Adv	 + 	Shift + Media
Mon/TV		Subt
Sp/Lp/Speed		Eject
Stop		Stop
Slow/Dpss-	 + 	Shift + Ch -
Auto/Track		Smart
Video/Go-To		D. Menu
Slow/Dpss+	 + 	Shift + Ch +
Pause		Pause
Menu		Menu
VCR/TV		Media
Menu Up		Up
Display		Info

Originalfernbedienung Ersatzfernbedienung

Menu Left		Left
OK Enter		Ok
Menu Right		Right
Exit		Exit
Menu Down		Down
T.Set/Clock		Back
Tracking+		Vol +
Tracking-		Vol -
Prev.		I<<
Audio		Dual
1		1
2		2
3		3
4		4
5		5
6		6
7		7



