


 



 

 

 



















Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|-----------------------------|
|  | Power |  | Power |
|  | Red/↑ |  | Red / Netflix / Search |
|  | Green/↓ |  | Green / APP / Repeat |
|  | Yellow |  | Yellow / YouTube / Repeat |
|  | Blue |  | Blue / Prime Video / Random |
|  | [≡] |  | Text / Goto |
|  | [≡x] |  | Exit / Cancel / Clear |
|  | EPG |  | Guide / EPG / -/-- |
|  | [*]/[■] |  | Zoom / Size |
|  | Screen |  | Picture / Format |
|  | Lang |  | Audio / Lang I/II |
|  | Subtitle |  | Subtitle / EQ |
|  | Sleep |  | Sleep / Timer |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |





 

 





 

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|-------------------|
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | FAV |  | Fav / Marker / PC |
|  | 0 |  | 0 |
|  | Tv/DTV |  | TV/Radio / |
|  | Vol- |  | Vol- |
|  | Vol+ |  | Vol+ |
|  | Mute |  | Mute / Dimmer |
|  | PR- |  | CH- / Page- |
|  | PR+ |  | CH+ / Page+ |
|  | Preset |  | Smart / List |
|  | Source |  | AV / Input / RDS |
|  | Info/[≡?] |  | Info / Angle |
|  | Swap/Recall |  | Display / Media |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|---------------|
|  | Return |  | Back / Return |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Down |  | Down |
|  | M |  | Menu / Home |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | |
|--|--|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

