



 



































 

 







 

 







Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	i / EPG		Guide / EPG / -/--
	i / EPG		Info / Angle
	0		0
	List		Smart / List
	Up / CH+		CH+ / Page+
	Up / CH+		Up

Originalfernbedienung Ersatzfernbedienung

	Left / Vol-		Left
	Left / Vol-		Vol-
	OK		OK
	Right / Vol+		Vol+
	Right / Vol+		Right
	Down / CH-		Down
	Down / CH-		CH- / Page-
	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	Rec		Rec / Rec Mode
	Swap		Back / Return
	Red / <<		Red / Netflix / Search
	Red / <<		<< / Tune-
	Green / Play		Play / Slow
	Green / Play		Green / APP / Repeat
	Blue / >> / Text		>> / Tune+
	Blue / >> / Text		Blue / Prime Video / Random





Originalfernbedienung Ersatzfernbedienung

The image shows a black Mandis remote control with a variety of buttons. At the top, there is a red power button, a black dimmer/mute button, and a yellow shift button. Below these are four blue function buttons: TV, DVD, SAT, and AUX. The main section of the remote contains numerous buttons for media control, including play, pause, stop, first, previous, next, last, and a red emergency stop button. It also features buttons for volume, channel, and a numeric keypad. At the bottom, there are buttons for Netflix, App, YouTube, and Prime Video, along with search, repeat, and random controls.