

 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10+ / Aspect		Shift + Guide
	Subtitle		Subt
	Source		AV
	- [/] - / P.STD		Shift + Format

Originalfernbedienung Ersatzfernbedienung

	- [J] - / S.STD		Shift + Dual
	Menu		Menu
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Vol +		Vol +
	Vol -		Vol -
	Program +		Ch +
	Program -		Ch -
	Exit		Exit
	Open / Close		Eject
	Info		Info
	Setup / DVD / FAV		Options
	I/II / Audio		Dual
	[/ =] / Text		Text



